



Belt switch - driver's side, brake fluid level warning contact, brake lining/pad wear sender, front left

- E24 Belt switch, driver's side
- F34 Brake fluid level warning contact
- G34 Brake lining/pad wear sender, front left
- J234 Airbag control unit
- J285 Control unit with display in dash panel insert
- K19 Seat belt warning system warning lamp
- K75 Airbag warning lamp
- T6a 6-pin connector, red, under driver's seat
- T10f 10-pin connector, blue, connector point, A pillar, left
- T17g 17-pin connector, red, connector point, A pillar, left
- T32 32-pin connector, blue, on dash panel insert
- T32a 32-pin connector, green, on dash panel insert

119 Earth connection -1-, in headlight wiring harness

277 Earth connection -3-, in interior wiring harness

* Only applies to models with seat belt warning system

