

Fitting guide

Audi 2003 single wiper conversion

Written by Lee Johnson (Shezlee)



Tools required

- 1/2" and 5/8" Sockets
- Small flat blade screw driver
- WD40 or similar

Part numbers

- 8Z2 955 407C Wiper Arm
- 8Z2 955 425C Wiper Blade

Parts Supplied by VAG Parts

Instructions

- 1) Check Parts (Photo below).



- 2) Remove bonnet as described in Owners handbook.
- 3) Rotate wiper to the vertical position, you will need to switch on the electrics to do this, then remove plastic nut covers (Photo below).


Fitting guide

Audi 2003 single wiper conversion


Written by Lee Johnson (Shezlee)



International Audi A2 Owners Club

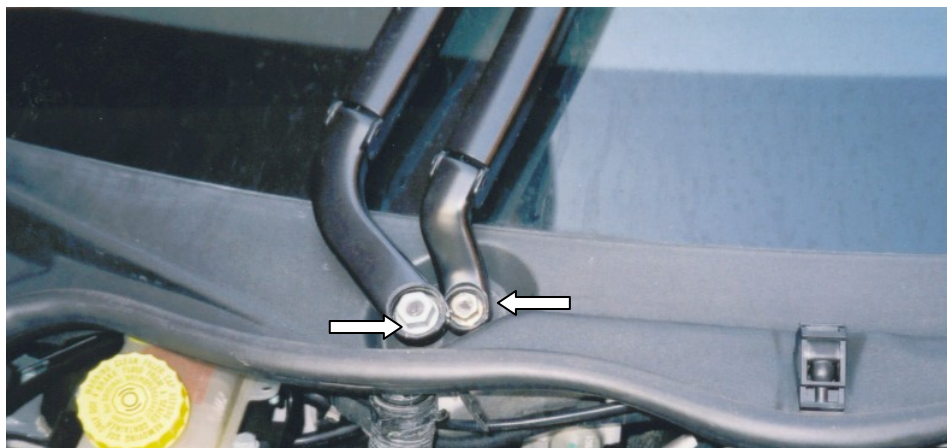

- 4) Remove nuts and spray WD40 around spindle, give a firm tug and wiggle of the wiper and it will release from the spindle (Photo below).

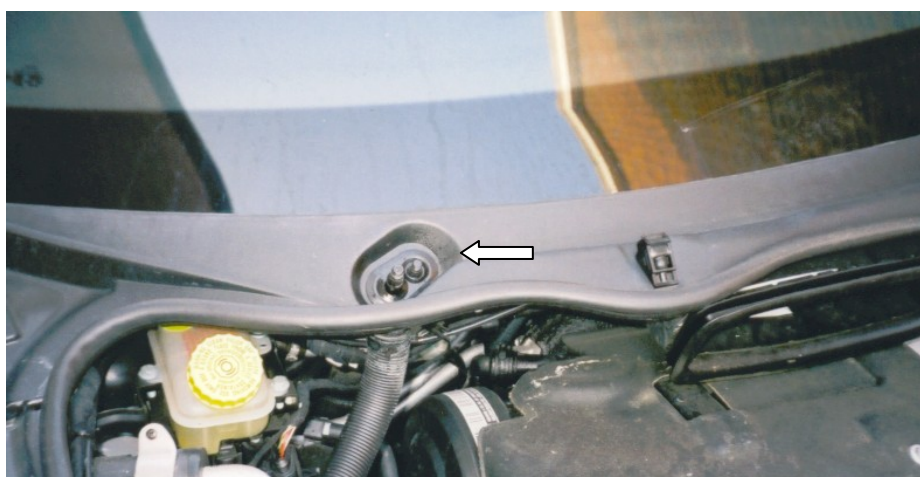

- 5) Switch on the electrics again to return the wiper motor to its parked position.

Fitting guide

Audi 2003 single wiper conversion

Written by Lee Johnson (Shezlee)



6) Fit new wiper arm and blade in the position shown (Photo below).



- 7) Fit and tighten the upper most nut (not fully) switch on the electrics once more so the wiper is vertical fit lower nut and tighten both fully.
- 8) Replace the plastic nut covers and switch on the electrics again the new wiper will return the position shown (Photo above).
- 9) Test wiper, checking washer jets are OK and hit windscreen.
- 10) Replace bonnet.