

# Fitting guide

## Audi front stowage console

*Written by Lee Johnson (Shezlee)*



---

### *Tools required*

- Small flat blade screw driver

---

### *Part numbers*

- 8Z0 711 549D 6PS Centre Tray – Black – Stowage Console for Symphony  
[Parts Supplied by VAG Parts]

---

### *Instructions*

- 1) The centre tray fits between the front seats and is for those A2's with double DIN radios as they lose a storage pocket (not much use anyway, unless you wedge something in it).
- 2) This is not for the faint hearted as it looks and feels like your ripping the car apart but most defiantly worth it.
- 3) Check Parts (Photo below).



# Fitting guide

## Audi front stowage console

*Written by Lee Johnson (Shezlee)*



- 4) Pull handbrake cover forward along the line of the handbrake. (Catch the silver ring)  
(Photo below).



- 5) Pull the lower cover forward (There is a little clip at the lower forward edge) (Photos above and below).



# Fitting guide

## Audi front stowage console

*Written by Lee Johnson (Shezlee)*



- 6) Pull the hump (bit with 12V socket) up and unplug 12V socket arrowed and remove.



- 7) Remove the 12V socket from the hump. (The silver bit pushes through the Orange bit and through the hump, you will need to squeeze the spring clips arrowed (one each side) and press down as per this photo (Photos below).



- 8) To remove the orange bit you will need to squeeze the orange clips and out it comes (you can only do this when No. 7 is done)


# Fitting guide

## Audi front stowage console


*Written by Lee Johnson (Shezlee)*



9) Replace the 12V socket in the new tray, reverse of above (Photo below).

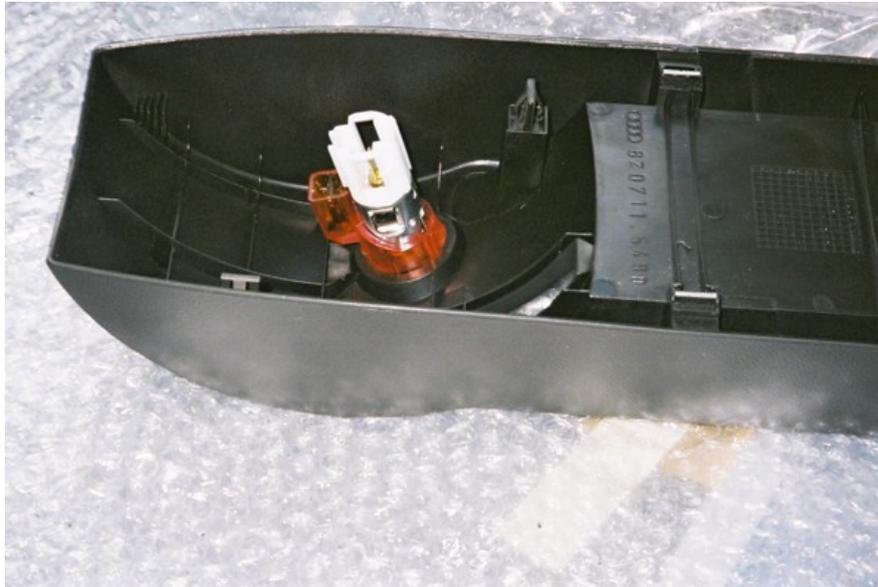

10) With the tray upside down remove the 4 (four) metal and plastic lugs around the edge of the tray (NOTE the lugs in the hump need to stay) and remove the 4 (four) smaller plastic bits in the middle of the tray (Photos below).

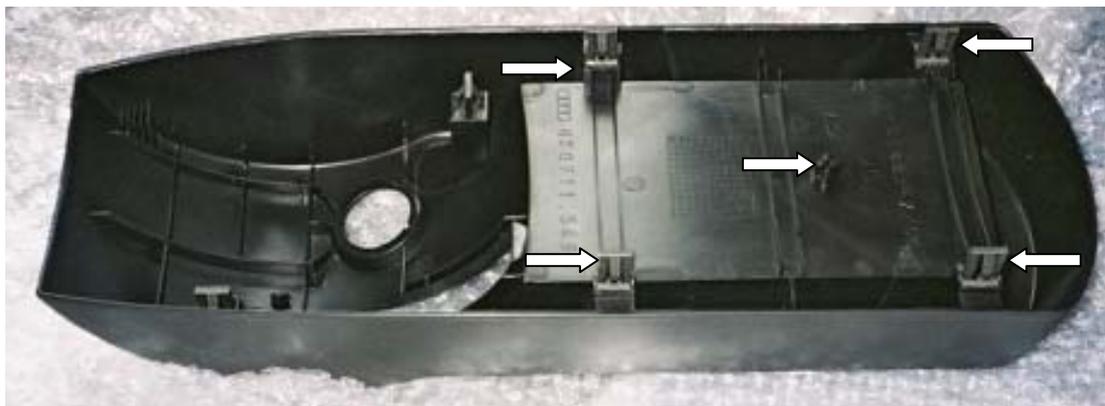


# Fitting guide

## Audi front stowage console

*Written by Lee Johnson (Shezlee)*



- 11) Stick the 6mm thick Number Plate fixers on the under side of the tray after the curved supports (only 2 are required) (NOTE need to be the 6mm ones).

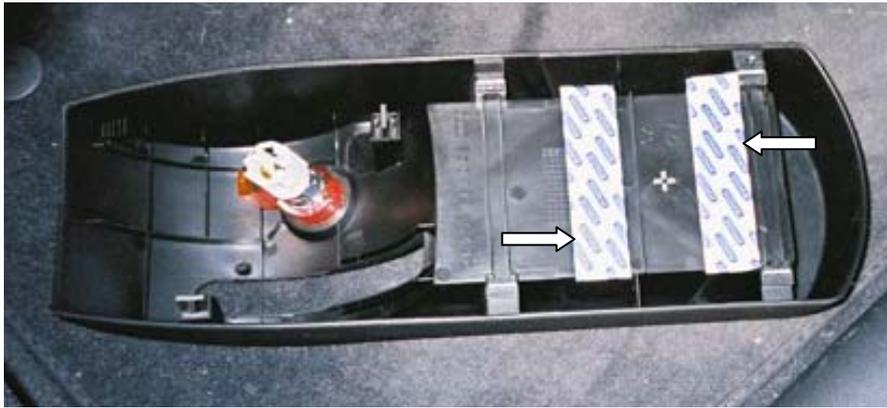

- 12) Fit tray into car (need to select odd gear 1,3 or 5) (Photo below).



- 13) Reconnect the 12V socket (only fit one way)
- 14) Push tray in to position and press down

# Fitting guide

## Audi front stowage console

*Written by Lee Johnson (Shezlee)*



15) Replace the handbrake covers and the silver ring (Photo below).

