

Audi A2


Current Flow Diagram

No. 7 / 10



Air conditioning system/Climatronic operating and display unit, additional heating button (ECON), brake light switch, engine speed sender

- E87 - Air conditioning system/Climatronic operating and display unit
- E288 - Additional heating button (ECON)
- F - Brake light switch
- G28 - Engine speed sender
- J248 - Diesel direct injection system control unit
- N280 - Air conditioning system compressor regulating valve
- T16h - 16-pin connector, black, on heater controls
- T17 - 17-pin connector, brown, in footwell, front left
- T17e - 17-pin connector, blue, in footwell, front left
- 277 - Earth connection -3-, in interior wiring harness
- B131 - Connection (54), in interior wiring harness

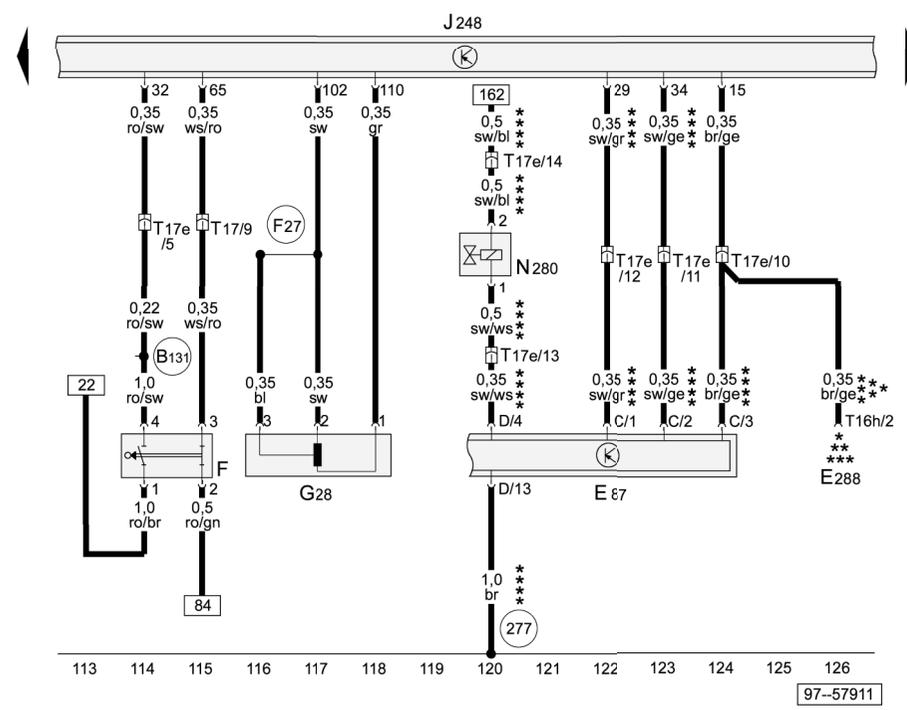

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- ge = yellow
- or = orange
- rs = pink

- F27 - Connection (screening), in diesel direct injection system wiring harness
- * - Only applies to models with fuel-burning additional heater
- ** - Only applies to models with electric additional heater (PTC 900 W)
- *** - Will be no longer fitted as of the introduction of the electric additional heater (PTC 1500 W), phased-in modification
- **** - Only applies to models with air conditioning system